

BETA903A Mobile Data Terminal

Operation

STEP1 BETA903A receives GPS satellite signal.

STEP2 BETA903A forwards GPS position signal to control center server by GPRS.

STEP3 Control center can locate BETA903A on local map or Google map, to manage vehicles.

STEP2-1 BETA903A runs GPS navigation system.

STEP3-1 Control center can send message to BETA903A.

STEP2-2 BETA903A can send message and talk to control center.

STEP3-2 Control center can talk to BETA903A.



BOLYMIN, INC.